


ITEM NO.: K8205 Teak

K8207 Gray K8211 Ash White KANGAROO sewing furniture

 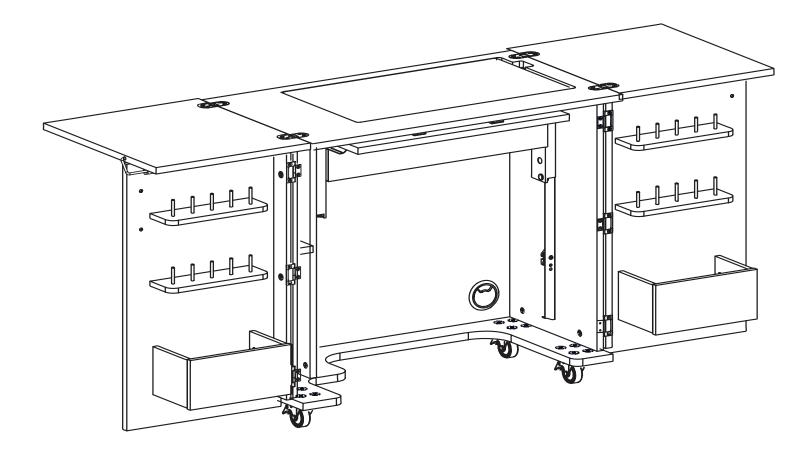


SEW IN COMFORT. SEW LONGER.™

General Assembly Guidelines


- 1. Read the instructions carefully before beginning the assembly process to ensure proper assembly of this product. Please open and inspect the contents of box(es) to see that all parts and hardware are included.
- 2. Tools Required







3. Understanding How the Cam Fastener Works

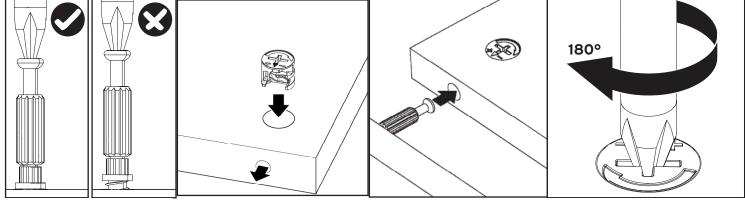

Screw cam bolts flush as illustrated.

 
surface. The arrow direction must be in the direction of the hole.

Press cam into hole until flush with Insert bolt through pre-drilled Turn clockwise to lock cam with bolt. hole in edge of panel.

Tip: place a small bit of WD-40 or similar lubricant into the pre-installed cam bolt holes to help the cam bolts screw in better.



4. Glue provided is to secure wood dowels in place and is optional. If glue is used during assembly, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately. It is not necessary to glue the other end of the dowel when attaching to other parts.




Use and Care Your cabinet normally requires a minimum amount of maintenance; however, the following points are worth noting:

Cleaning - To remove marks and enhance the surface, wipe with a gentle all-purpose cleanser. DO NOT use ammonia-based, harsh chemicals or abrasive cleaning agents. Wipe dry immediately.

Electrical and Hydraulic Lifts - Require annual lubrication with WD-40 or similar lubricant.

Bandicoot


Parts List: Panels

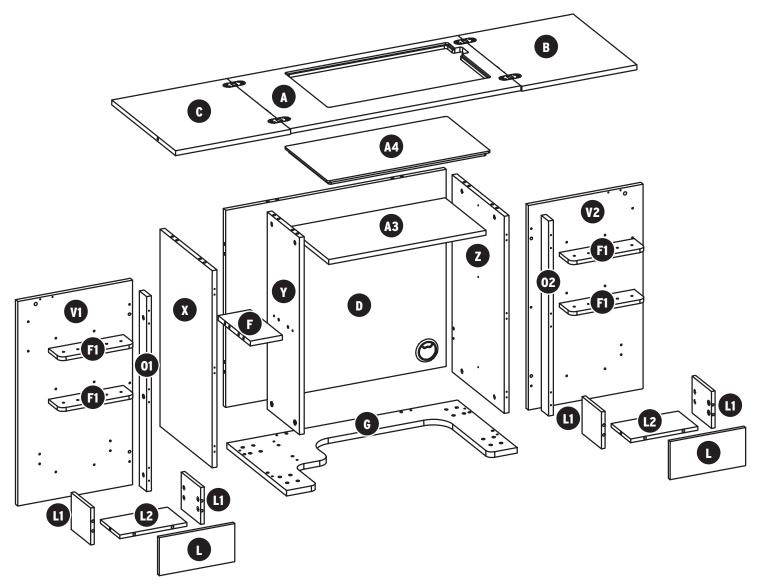


ITEM	DESCRIPTION	QTY.	PACK.
Α	Top Panel	1	1 of 2
В	Right Leaf	1	1 of 2
С	Left Leaf	1	1 of 2
A4	Cover	1	1 of 2
G	Bottom Panel	1	1 of 2
D	Back Panel	1	2 of 2
Х	Left Side Panel	1	2 of 2
Z	Right Side Panel	1	2 of 2
Y	Partition	1	2 of 2
F	Fixed Shelf	1	2 of 2
V1	Left Door Panel	1	2 of 2


ITEM	DESCRIPTION	QTY.	PACK.
٧2	Right Door Panel	1	2 of 2
01	Left Door Edge Panel	1	2 of 2
02	Right Door Edge Panel	1	2 of 2
F1	Door Shelf	4	2 of 2
L	Door Bin Front	2	2 of 2
L1	Door Bin Side	4	2 of 2
L2	Door Bin Bottom	2	2 of 2
A3	Platform	1	2 of 2
	Hardware Box	1	2 of 2
	Lift & Rails	1	3 of 3


Parts List: Hardware

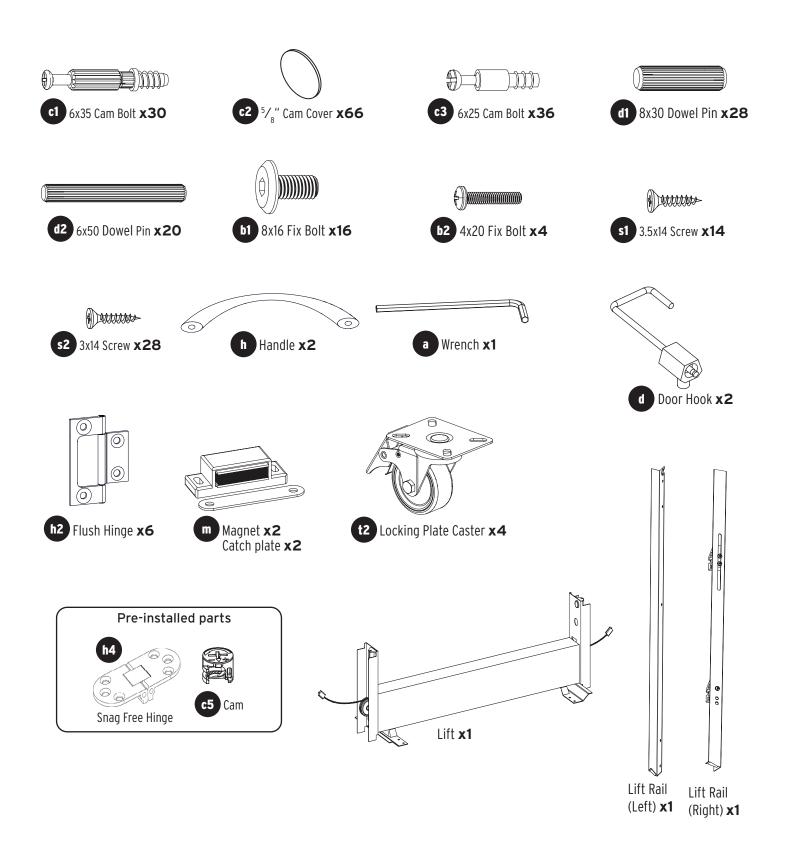


We can't wait to get your brand new Bandicoot Sewing Cabinet up and running. Please contact our Customer Service Team at 1-800-533-7347, ext. 1 during normal business hours with any assembly related questions.

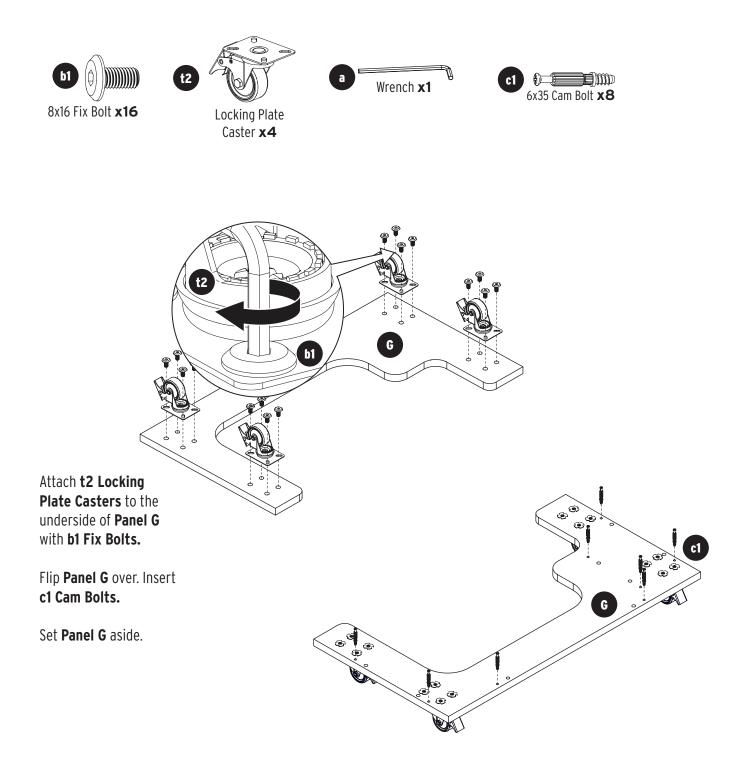


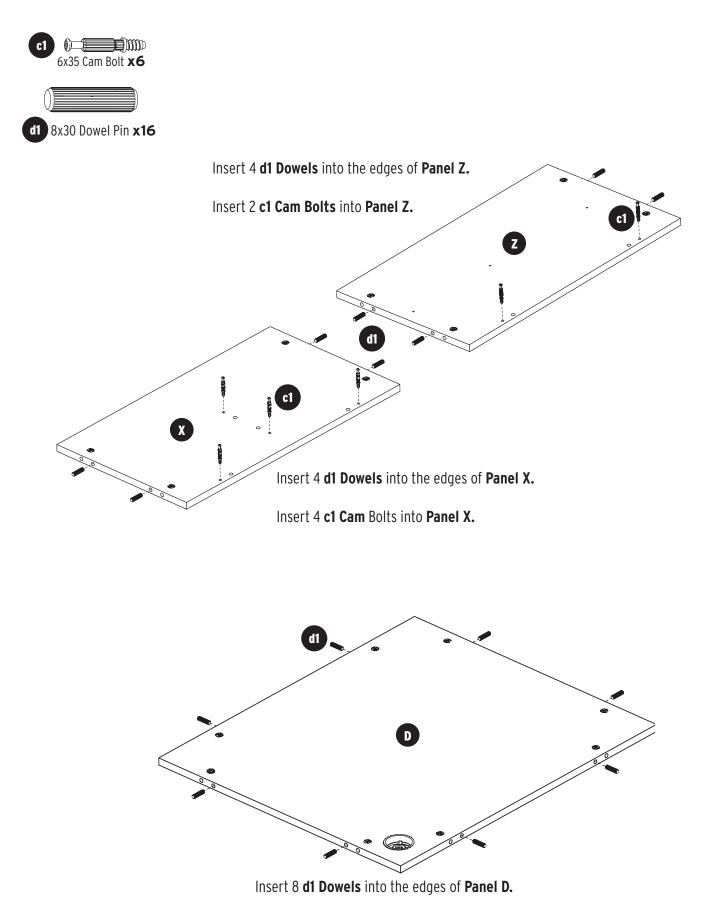

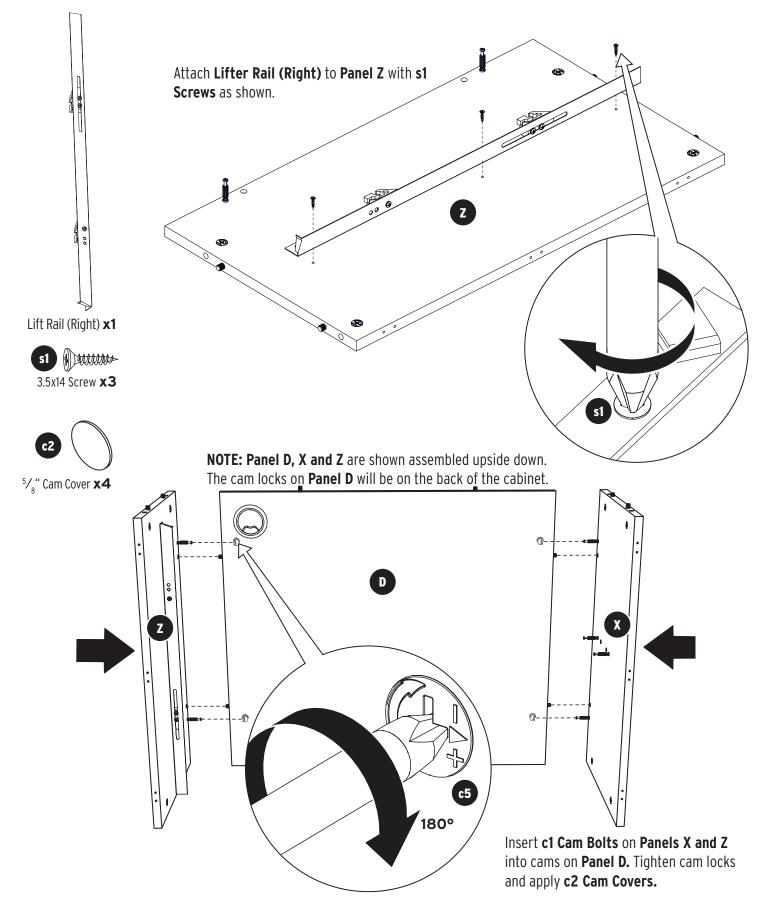


7

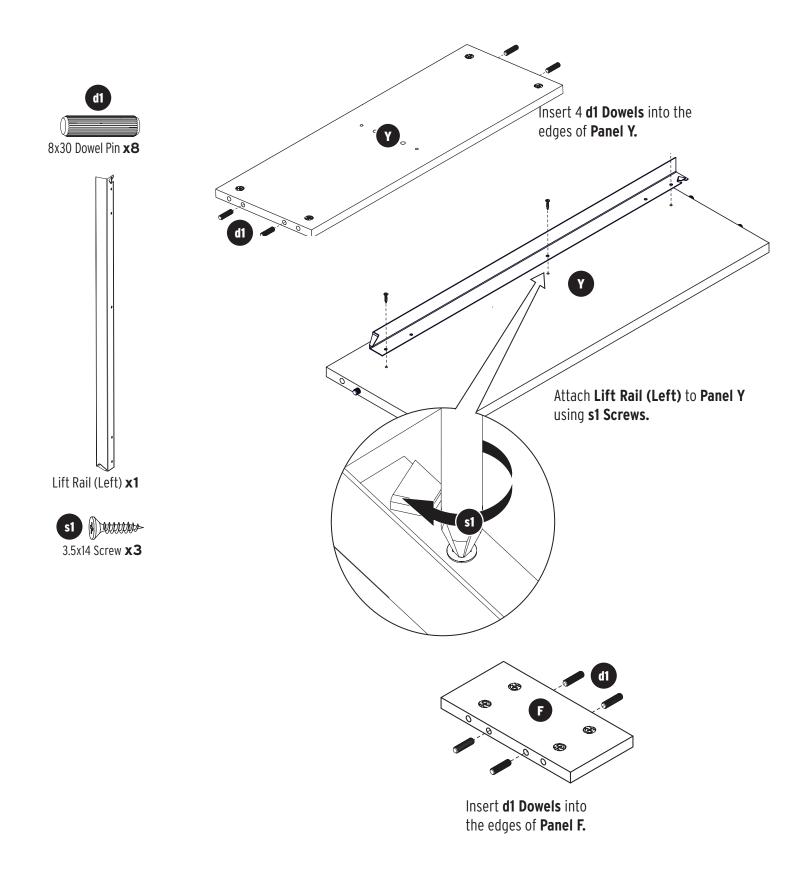

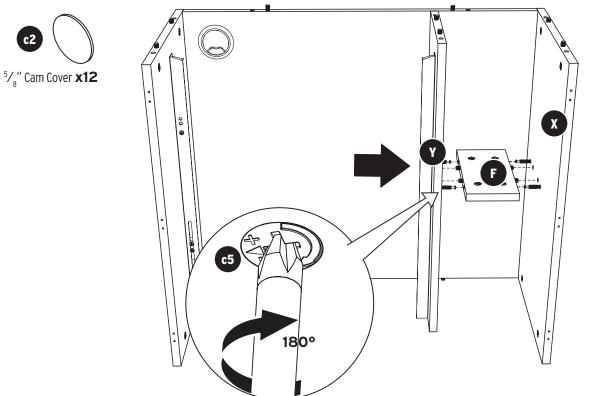

Insert c1 Cam Bolts on Panels X and Y into cams on Panel F. Tighten and apply c2 Cam Covers.

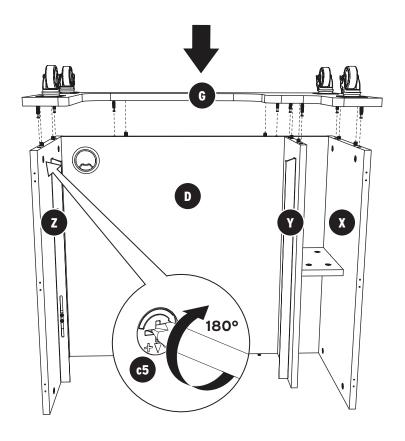

Insert **c1 Cam Bolts** on **Panel G** into cams on **Panels X, Y, Z and D.** Tighten and apply cam covers.

Make sure **t1 Locking Plate Casters** are locked and carefully turn the cabinet over onto its casters. You may need a friend to help you with this, but it is not required.


Step 2: Lift

LIFT INSTALLATION WARNING:

DO NOT remove the small wooden block from the Lift until assembly is complete. If the block is removed or falls out before lift assembly is complete, the cables will retract, making installation difficult. If the

block falls out before complete assembly, Please call Customer Service at 1-800-533-7347, ext. 1 for assistance, or visit www.arrowsewing.com/assembly and find the "Alternative Airlift Attachment Steps" video.

into the Lift Rails installed on your cabinet.

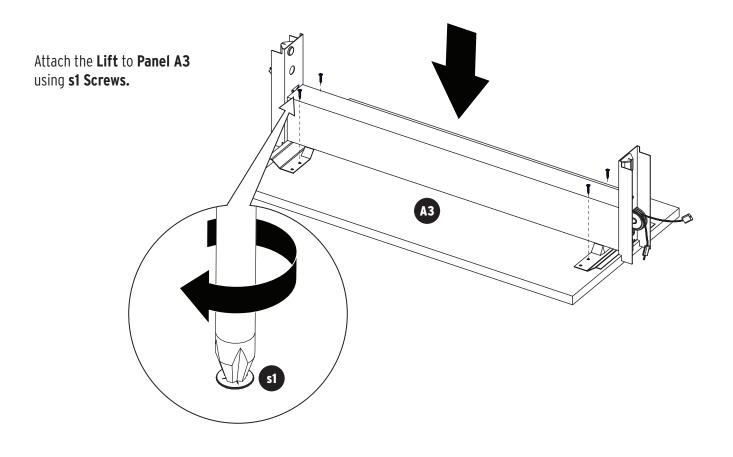


Step 2: Lift

Guide Lift onto Lift Rails using plastic guides. Insert ends of cable into rail tabs; make sure the cable is hooked into the rail tabs on both sides.

Cut the zip tie on the wooden block, but DO NOT remove the block yet.


Lower the Lift to first lock position and remove the wooden block. DO NOT ADJUST LIFT POSITION until the top is installed, or you risk the Lift coming out and cables becoming disengaged.

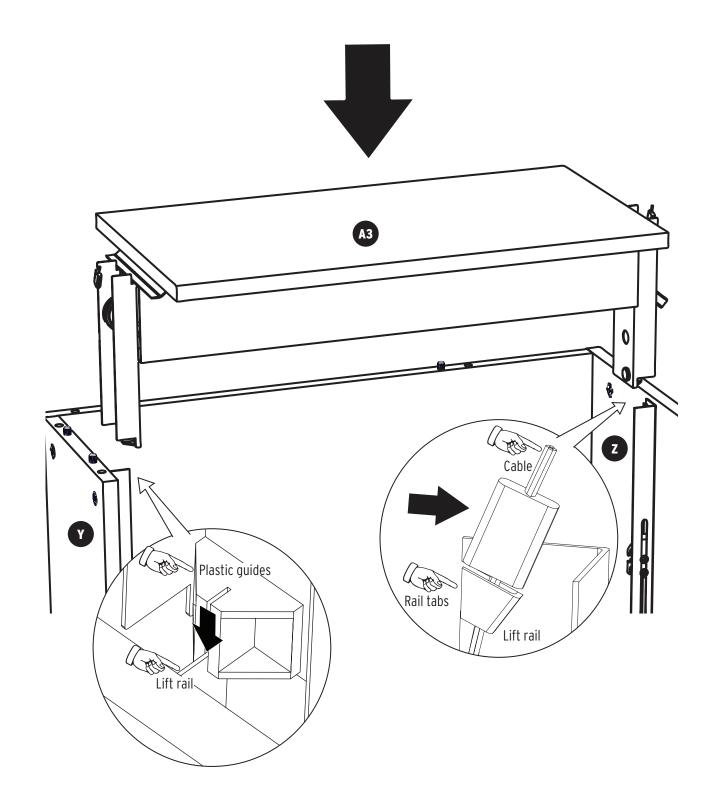


 Step 3: Top Panel







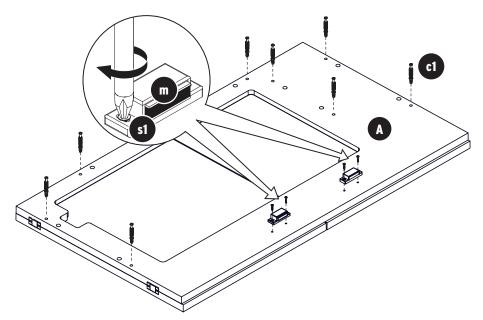


NOTE: Panels A, B and C come pre-assembled.

Insert c1 Cam Bolts into Panel A.


Attach **m Magnets** to **Panel A** using **s1 Screws.** Reserve the Magnet Plate for use later.



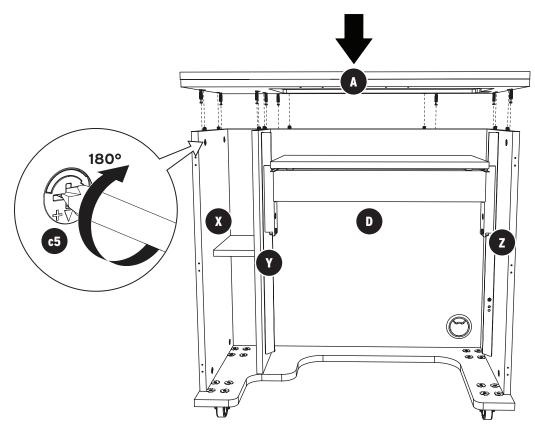


Lower Panel A, inserting c1 Cam Bolts on Panel A into cams on Panels X, Z, D and Y.


Tighten cams and apply **c2 Cam** Covers.

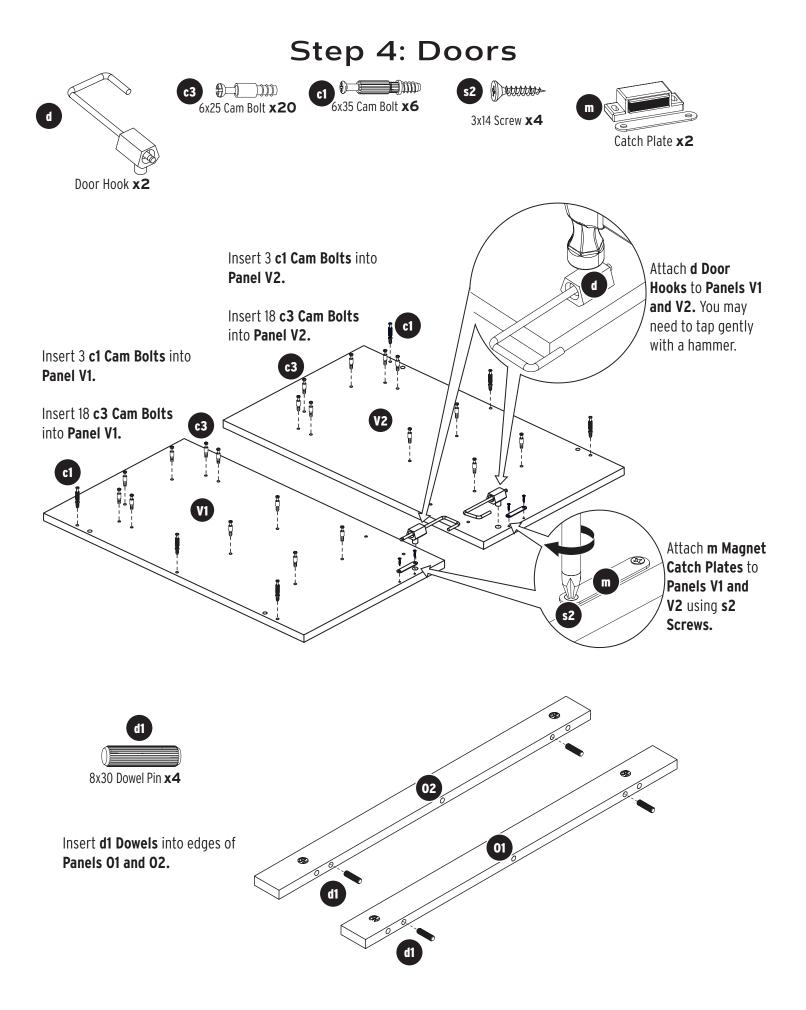


Step 4: Doors

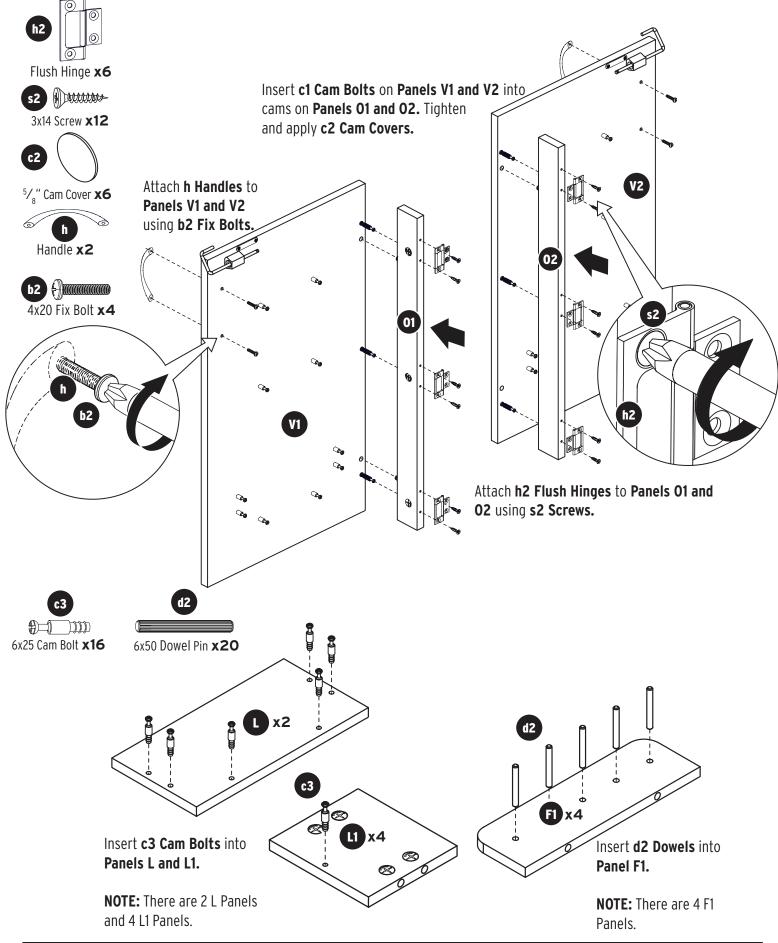

Step 4: Doors

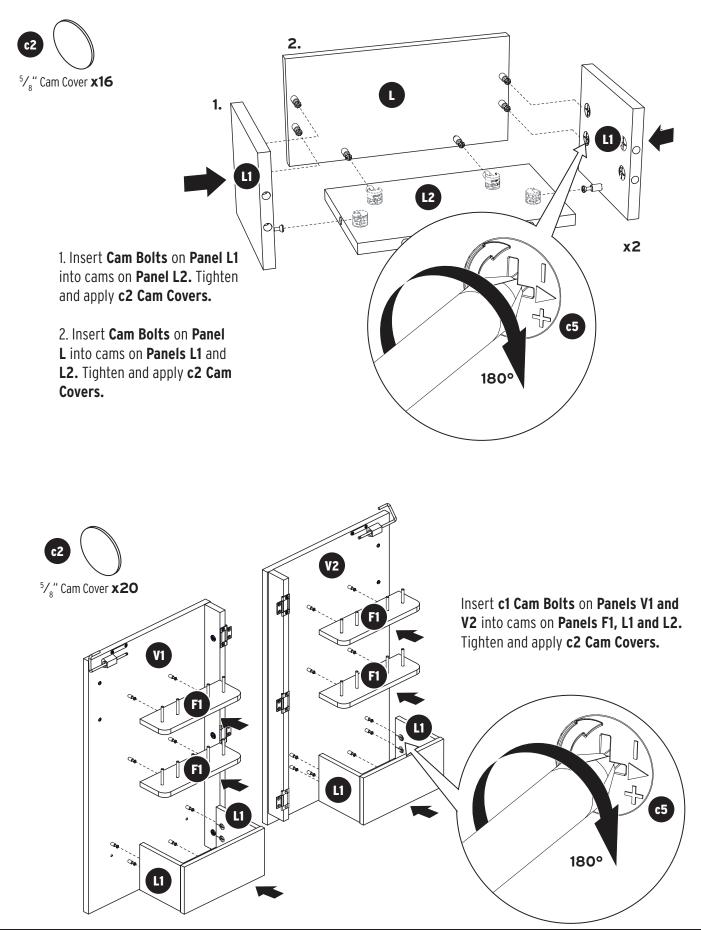

Step 4: Doors

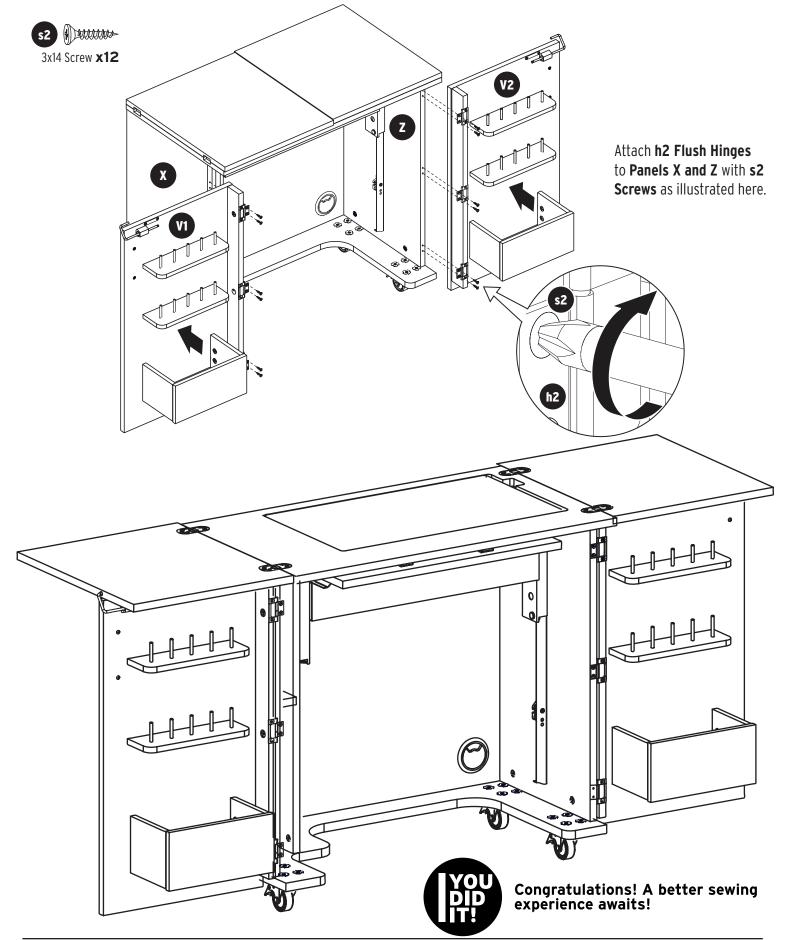



LIMITED LIFETIME WARRANTY

Kangaroo™ Sewing Furniture Limited Lifetime Warranty

WHAT THIS WARRANTY COVERS: Arrow Companies, LLC "Arrow" provides a Limited Lifetime Warranty "Warranty" to the original purchaser of this product against defects in materials or workmanship of furniture components. As used in this Warranty, "defect" means imperfections in components which substantially impair the utility of the product. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Electrical and mechanical components of furniture are warrantied for 5 years.

HOW TO GET SERVICE: Simply contact Arrow at 1-800-533-7347 or CS@ArrowSewing.com. When you request Warranty service, you must also present proof of purchase documentation, which includes the date of purchase (detailed receipt), and photos of the product. Arrow will replace any defective part (at its sole option), excluding labor. Replacement parts will be warranted for only the remaining period of the original Warranty.

Replacement parts will be shipped freight prepaid on any initial Warranty claim during first year of Warranty only. Warranty applies only to defects confirmed by Arrow and will be replaced or repaired at Arrow's option. In the event parts are no longer available for a Warranty claim, customer may receive a brand new cabinet at a price equal to 60% off the MSRP of a current comparable model.

WHAT'S NOT COVERED: There is no Warranty coverage for defects or conditions that result from the failure to follow product assembly instructions, information or warnings, misuse or abuse, intentional damage, fire, flood, alteration or modification of the product, or use of the product in a manner inconsistent with its intended use, nor any condition resulting from incorrect or inadequate maintenance, cleaning, care, or neglect, cuts or scratches, caster damage as a result of moving furniture fully loaded or with locked casters, damage resulting from electrical surge or lightning, or use in commercial or education environments. Kangaroo Sewing Furniture is designed for residential use only.

ARROW SHALL HAVE NO LIABILITY for ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND and all such damages are EXCLUDED FROM THIS Warranty, such as loss of use, disassembly, transportation, labor, or damage to property on or near the product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. The Warranty cannot be transferred to subsequent owners or users of the product, and it shall be immediately void in the event the product is resold, transferred, leased or rented to any third party or person other than the original purchaser.

ADDITIONAL LIMITATIONS: THERE ARE NO OTHER WARRANTIES APPLICABLE TO THIS PRODUCT. Under the laws of certain states, there may be no implied warranties from Arrow and all implied warranties, INCLUDING ANY IMPLIED Warranty OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE are disclaimed where allowed by law. TO THE EXTENT ANY IMPLIED WARRANTIES ARE APPLICABLE, ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED Warranty OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS Warranty or the minimum period allowed by law, whichever is shorter. Some states do not allow limitations on how long an implied Warranty lasts, so the above limitation may not apply to you. This limited Warranty gives you specific legal rights. This limited Warranty does not, in any way, affect the rights given to you by law.

REGISTER YOUR PRODUCT: Original purchaser should register the purchase online at www.ArrowSewing.com/Warranty.


SEW IN COMFORT. SEW LONGER.™



Accessories to Complete Your Sewing Studio

Custom Insert

Enhance your sewing experience with a custom acrylic sewing insert! Custom acrylic sewing inserts are designed to fill the gap between your sewing machine and sewing cabinet's lift opening to create a flush, ergonomic surface for flat bed sewing. To ensure a perfect fit, custom acrylic sewing inserts are built specifically for your sewing machine and sewing cabinet combination. Say hello to happy wrists, straighter stitches, and an elevated sewing experience!

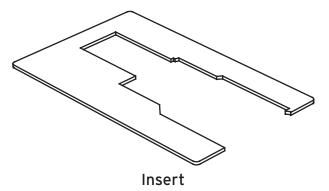

Arrow Sewing Chairs

Arrow's #1 Rated Height Adjustable Sewing Chair is a must have accessory for your dream sewing room! Cute, comfortable and convenient - our lovable sewing chairs feature vibrant sewing themed patterns, 360 swivel access and lumbar support for long hours at your workstation. Don't look now, but under every seat cushion is a hidden storage compartment to store your notions and patterns! Available in 10 colors to perfectly match your sewing sanctuary!



Height Adjustable Sewing Chair

P.O. Box 410 Elkhorn, WI 53121 1-800-533-7347 Ext. 1 CS@ArrowSewing.com www.ArrowSewing.com

02-22

SEW IN COMFORT. SEW LONGER.™